




ECO  **WAVE**




Passion for fire

ECO  **SWITCH**

The App can be downloaded from the AppStore for Apple devices, and from the Google Play Store voor Android devices (under M-Design or M-Control)

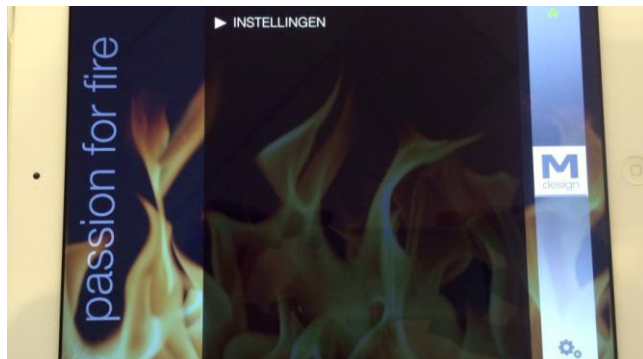

1 – Startscreen for SETTINGS

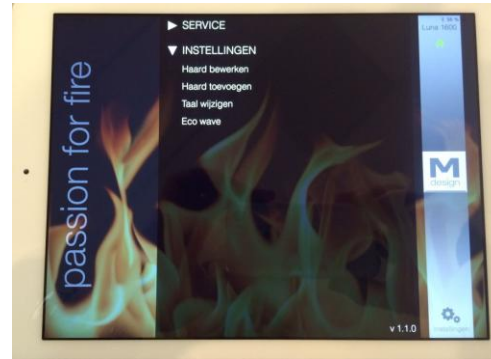

2 – Go to Add a fireplace!




3 – Press on the '+' next to the address of the Gateway



4 - Various fires can be added and named



5 – Slide the bar to the right to start the fire

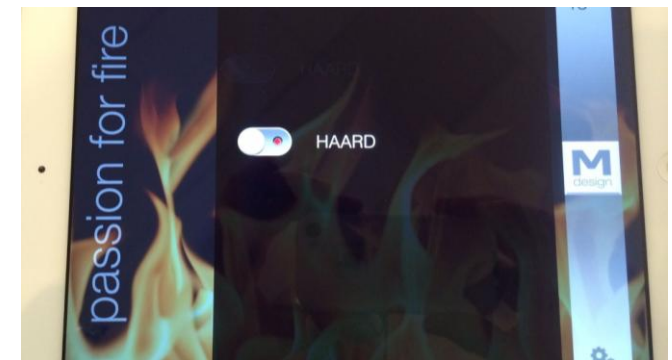


6 – Immediately afterwards press the knob for extra child safety


Once this App has been downloaded, and you have a 'Gateway' from M-Design.




7 – The fire has started

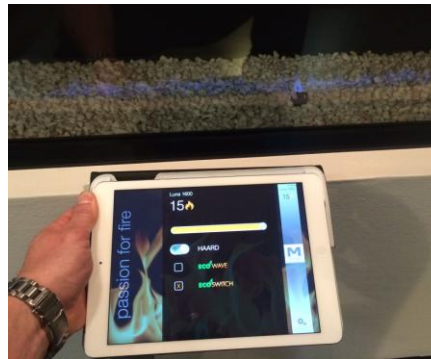

8 – Once lighted you will see this screen
The orange flame shows the flame height

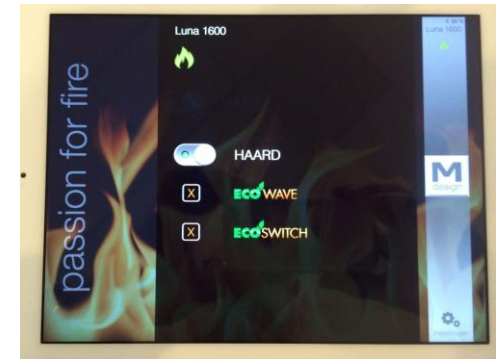

9 – A green flame is the Eco Wave position
and Eco Switch position is checked (X). With
the Eco Switch checked, you work with 1 burner

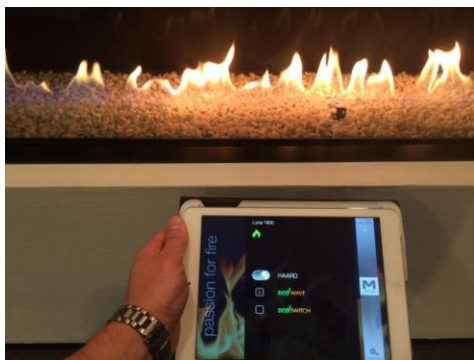

10 – With Eco Wave on, and Eco Switch off
You work with 2 or 3 burners




11 – To get to the screen of the Eco Wave
Settings, you press on your device with the
Eco Wave Text of picture 10



12 – Indicate with a cross next to the
Eco Switch and you work with 1 burner.

If you have to connect this 'Gateway' with a UTP cable to your wifi router, the 'Gateway' has to be within 3, 4 meters of your fireplace. Once it is connected, pull out the plug of the fireplace and go to step 1.

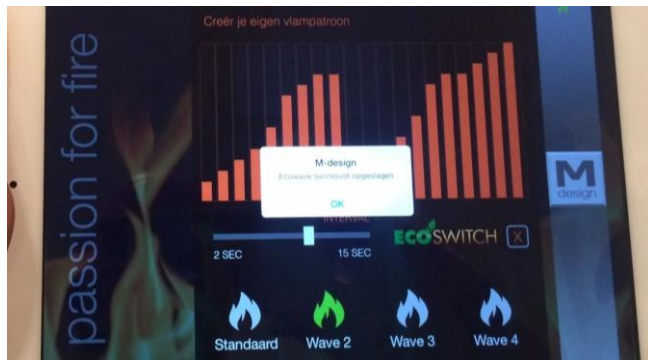


13 – You can create your own flame pattern and save it by pressing on the flame a bit longer



14, 15 – By pressing on the text, you can also alter the pattern and give it your own personal name.



16, 17, 18, 19 – With your finger on the screen, you create your own flame pattern. By keeping your finger on the flame, you can save it. By keeping your finger on the text, you can change the name as you wish. If you slide the interval bar you can easily switch the Interval from 2 sec to 15 sec, Once this has been done, press selection and your Wave becomes operational.

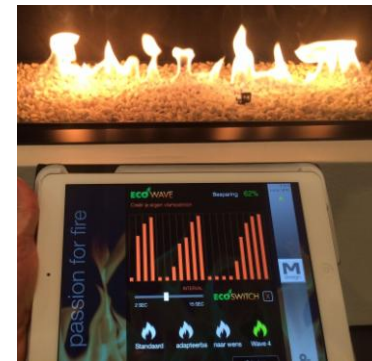

Demo Movie of an Eco Wave flame pattern setting !